

ACCESSORY SETUP INSTRUCTIONS

BRAKE LEVER_TITANIUM, BRAKE LEVER_BLACK PN: 6AQV-802000-1000, 6AQV-802000-1000-10 VALID FOR: CF 450SR/SS

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.

PART LIST:

S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	BRAKE LEVER_TITANIUM	6AQV-802000-1000	1	Picture is for structure
	BRAKE LEVER_BLACK	6AQV-802000-1000-10	1	reference only.

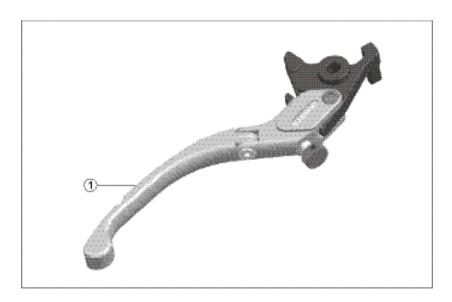


TOOL LIST:


ITEM	DESCRIPTION	REMARK
1	8mm SOCKET	
2	10mm OPEN END WRENCH	Recommended Tools
3	PROTECTIVE GLOVES	



WORK

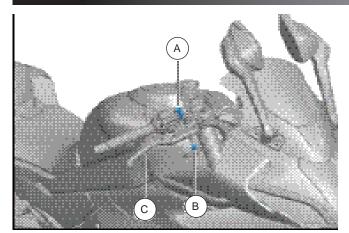

Disassemble the bolt (A) and nut (B) to remove the original brake lever (C).

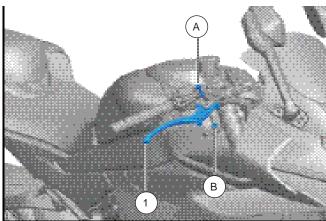

- Align the new brake lever (1) with its installation hole. Then secure it with the original bolt (A) and nut (B).
- // Assembly is complete.



ACCESSORY SETUP INSTRUCTIONS

CLUTCH LEVER_TITANIUM, CLUTCH LEVER_BLACK PN: 6AQV-803000-1000, 6AQV-803000-1000-10 VALID FOR: CF 450SR/SS

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.

PART LIST:

S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	CLUTCH LEVER_TITANIUM	6AQV-803000-1000	1	Picture is for structure reference only.
	CLUTCH LEVER_BLACK	6AQV-803000-1000-10	1	

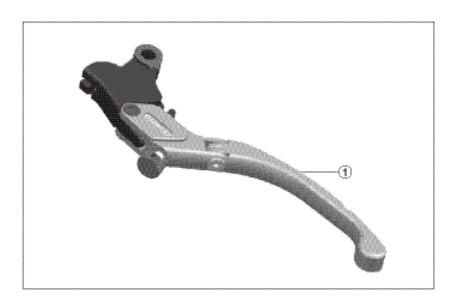


TOOL LIST:


ITEM	DESCRIPTION	REMARK
1	FLAT BLADE SCREWDRIVER	
2	10mm OPEN END WRENCH	Recommended Tools
3	PROTECTIVE GLOVES	



WORK

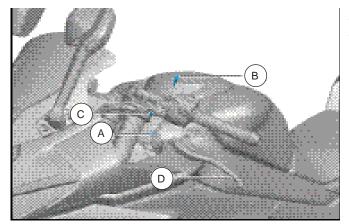

- Remove the bolt (A) and nut (B) for the clutch lever (D).
- Disassemble the clutch cable (C) and remove the original clutch lever.

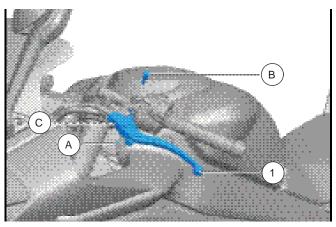

- // Install the clutch cable (C) on the new clutch lever (1).
- Align the new clutch lever with its installation hole, and secure it with the original bolt (A) and nut (B).
- // Assembly is complete.