

## ACCESSORY SETUP INSTRUCTION

### LEVERS, SILVER -- PN 6KM6-802200-8000

VALID FOR: MY22 and later 300SS

**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, and turn off the key switch.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


## MEANING OF SYMBOLS

 - Indicates information with more details or tips.

 - Indicates information of warning or danger.


## PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	CLUTCH LEVER	6KMV-802210-8000	1	
2	BRAKE LEVER	6KMV-802220-8000	1	

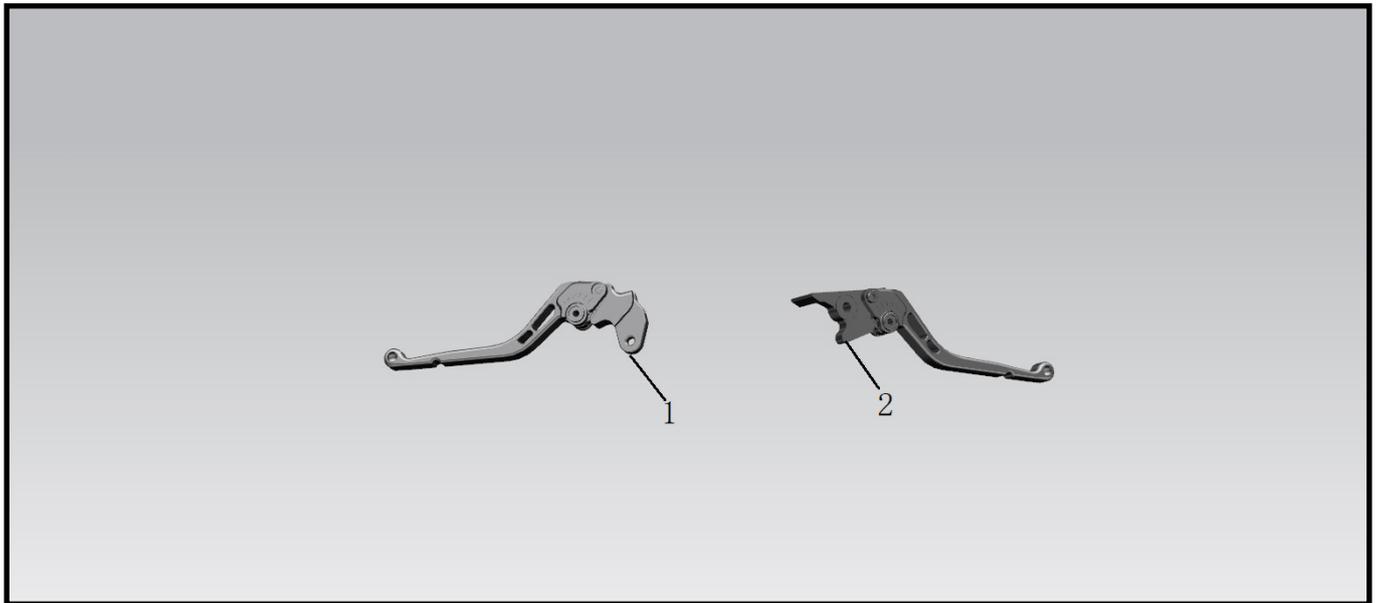


## TOOL LIST:


ITEM	DESCRIPTION	QTY.	REMARK
1	PROTECTIVE GLOVES	1	Recommended tools
2	8-10mm OPEN END WRENCH	1	
3	PHILIPS SCREWDRIVER	1	
4	ALLEN WRENCH 10mm	1	

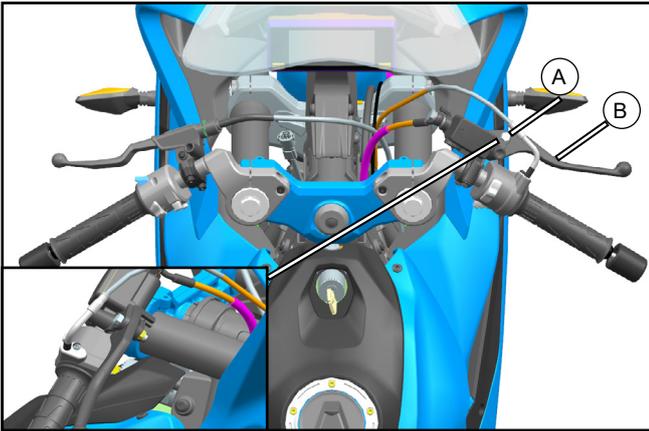


// Remove the bolt (A) and lever (B).

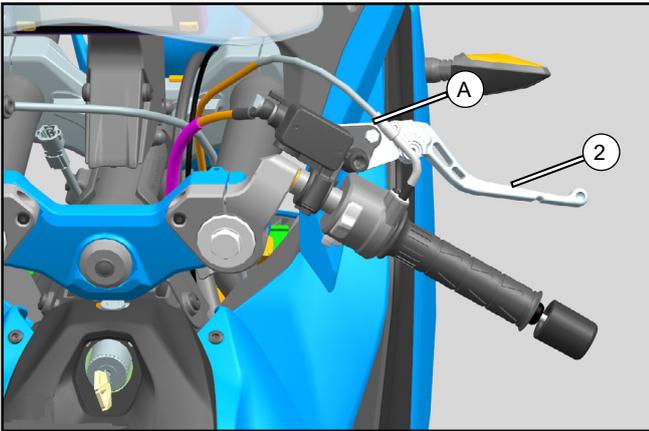

// Put the brake lever (2) into the original lever and tighten with bolt (A).

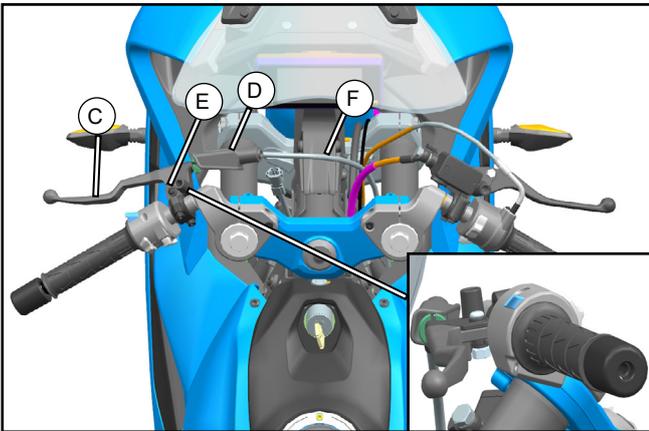

// Move the rubber dust cover (D) backward and remove the screw (E) and clutch cable (F) in turn. And finally remove the lever (C).

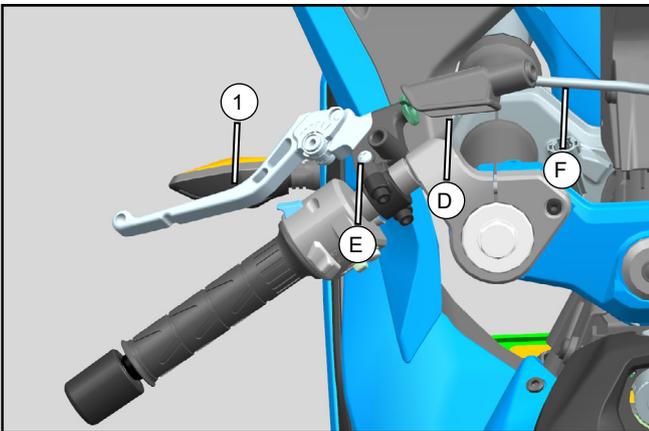

// Install clutch lever (1) with clutch cable (F) into original handle position, tighten with screw (E), and reset rubber dust cover (D).

